RAPID With Des

Rinse Aid with Descaler

SKU: 143 DOM*

Rinse Aid with Descaler built-in not only eliminates water spotting on glassware, crockery and cutlery but also protects the dishwasher / glasswasher from rusting or scaling from food deposits. It is also designed to help disperse the rinse water to ensure the rapid drying of dishes and utensils. This product is suitable for all water conditions, simple and safe to use.

Rinse Aid with Descaler has an advanced formula that eliminates the possibility of scale formation within the washing machine ensuring an excellent performance. It is ideally suited for use in all commercial and automatic warewashing machines.



- **✓** BUILT-IN DESCALER
- ✓ WORKS IN HARD OR SOFT WATER
- ✓ LEAVES GLASSES SPARKLING & STREAK FREE
- ✓ ECONOMICAL FORMULA
- ✓ PHOSPHATE FREE
- ✓ BIODEGRADABLE SURFACTANTS
- ✓ SAFE FOR FOOD PROCESSING AREAS & SEPTIC TANKS WHEN USED ACCORDING TO DIRECTIONS PROVIDED

5 litres, 20 litres
Blue thin liquid
Soluble
1.5 - 2.0
1 - 1.02
None
Domestic & Industrial
Kitchen

Directions for use:

DRYING

Machine with no Automatic Rinse & Dispenser: Add $\frac{1}{2}$ - $\frac{1}{4}$ teaspoon to the final rinse.

Machine with Automatic Rinse & Dispenser: Refer to your machine instruction booklet. Check dispenser regularly.

Safety Information: Please consult Safety Data Sheet prior to use.



www.sanitiseandclean.com.au

Phone: 02 8377 3499 | SMS your order: 0488 707 077 14A Williamson Rd, Ingleburn NSW 2565 Email: orders@sanitiseandclean.com.au

